

NOVUS Configurators Guide

 CONFIGURATOR

TxConfig USB
Configurator software + USB interface
8816021039



 CONFIGURABLE PRODUCTS

TxBlock without USB, RHT 4-20 and 0-10
Temp-WM
TxRail, TxIsoRail, old TxIsoBlock
TxMiniBlock

TxConfig-HRT
HRT Configurator Modem + USB interface
8816021059



TxConfig Pack
Configurator software + USB Micro B plug cable
8807000099



TxIsoPack-HRT
TxIsoRail-HRT
NP800H
NP860

TxConfig-USB NP
Configurator software + USB Interface (Pressure)
8816021049



TxIsoPack

TxConfig DIN43650
Configurator software + USB interface (Pressure)
8816021069



NP300
NP-600
NP-620
TxMini-DIN43650

TxConfig II
Configurator Software + USB Micro B plug cable
8806000420



TxBlock-USB
TxRail-USB

TxConfig-USB-M12
Configurator software + USB interface
8816021079



TxMini-M12


NConfig Software

8845000130



N1540 N3000
N1040 N960
N1200 N480D
N1100 N120
N1020 N1540TOT
N1040i N1200HC
N2000 N1040T

Optical Interface - Link3
USB + software
8813099050

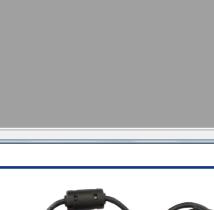

LogBox-DA
LogBox-AA
LogBox-RHT-LCD

LogChart II Software

No need of interface



TagTemp Stick
TagTemp-USB
N120-DL

NFC-USB Interface

8813099080



TagTemp-NFC
Thermo boxes

LogChart-NFC

ANDROID app



TagTemp-NFC

TxDroid Config

OTG Cable + Micro USB Cable



TxBlock-USB

FieldLogger Configurator

Included in FieldChart software



FieldLogger

DigiGate Profibus DigiRail-VA
AirGate-Modbus DigiRail-2A
AirGate-GPRS DigiRail-2R
RHT-Modbus DigiRail-4C
RHT-Air