

STARTER KIT

HART® Temperature Transmitters




Included:

- 1 TxIsoRail-HRT transmitter;
- 1 TxIsoBlock-HRT transmitter;
- 1 TxConfig-HRT interface;
- 1 power supply FTR 24 V;
- 2 resistors 270 Ohms;
- 2 NTC sensors;
- 3 m cable.

NOVUS
We Measure, We Control, We Record



STEP-BY-STEP GUIDE FOR TXISOBLOCK-HRT

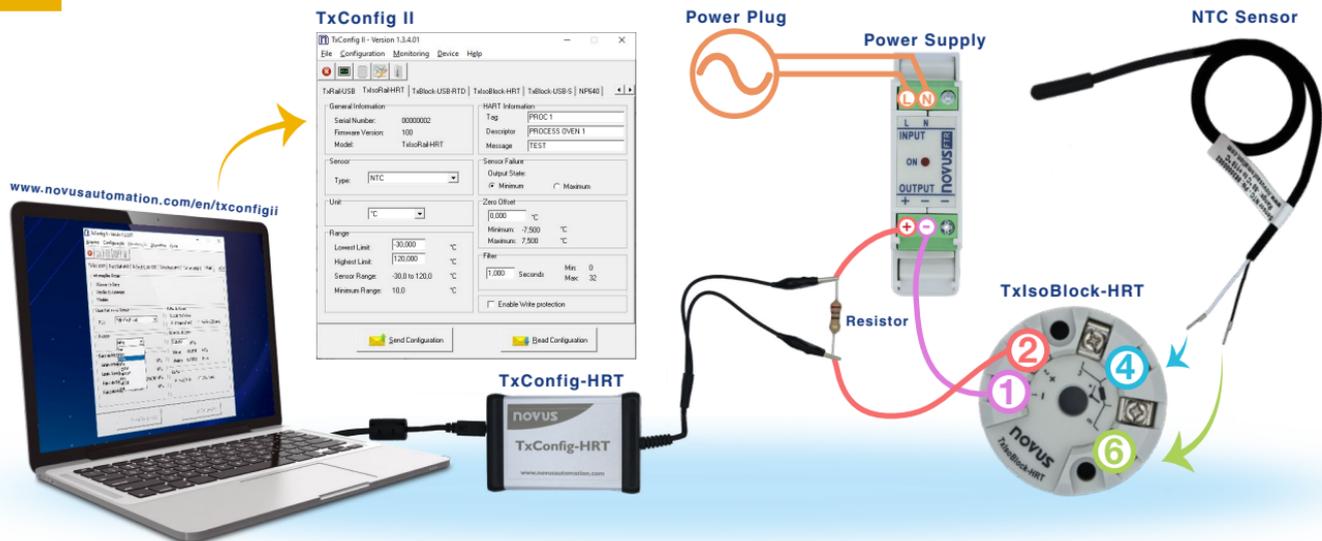

Install TxConfig II software in your computer and connect TxConfig-HRT interface to install the drivers.

01

Follow the loop wiring diagram, observing the resistor connection.

02

Connect the TxConfig-HRT alligator clips in parallel with the resistor.

03

Connect the NTC sensor to the transmitter using the pins indicated on the wiring diagram.


04

Switch on the power supply, open the software and configure the sensor type.

05



STEP-BY-STEP GUIDE FOR TXISORAIL-HRT

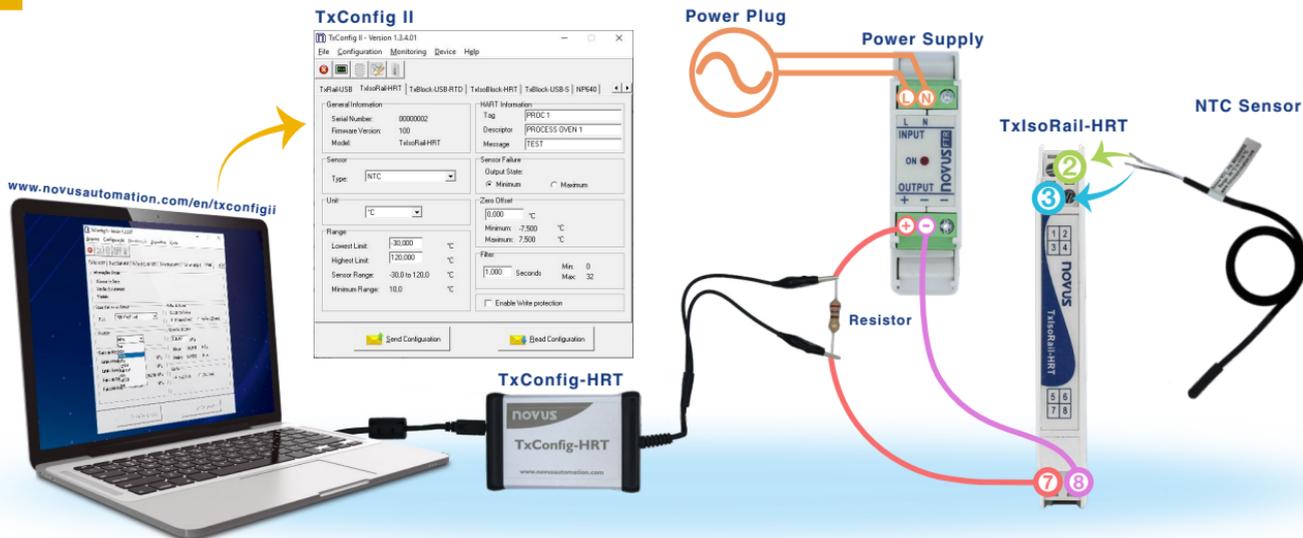

Install TxConfig II software in your computer and connect TxConfig-HRT interface to install the drivers.

01

Follow the loop wiring diagram, observing the resistor connection.

02

Connect the TxConfig-HRT alligator clips in parallel with the resistor.

03

Connect the NTC sensor to the transmitter using the pins indicated on the wiring diagram.

04

Switch on the power supply, open the software and configure the sensor type.

05



NOVUS
We Measure, We Control, We Record

For over 30 years, NOVUS has developed and manufactured innovative and reliable products for data acquisition, temperature and process control, signal conditioning and transmission of field variables complying with worldwide quality requirements providing solutions that exceed customers' expectations. For more information check it out our solutions by the link and follow us on our social media:



@novusautomation

www.novusautomation.com



HART
COMMUNICATION PROTOCOL